

## Aztech 700WR-3G – 3G/LTE failover

1. Log into the modem's web interface by entering 10.0.0.2 in the address bar of an Internet browser. The default username and password are *admin* and *admin*.
2. Click on Advanced Mode at the top of the page.
3. Click on Network and then Internet.
4. Next to Internet Connection click the Mobile Broadband radio button.
5. Change the APN setting to TelkomInternet.



6. Click the Apply button.