

PERSONAL

Setting up Wifi

How to setup the Wise Touch Tablet
to connect to your ADSL via Wifi

Telkom


Setup the Wise Touch Tablet to connect to your ADSL via WiFi

Turn the device on by holding the power button until the boot-up screen appears and wait until the desktop is visible.


On the Homepage touch on the **Settings** button




On the settings menu touch on the **Wireless & Networks** option

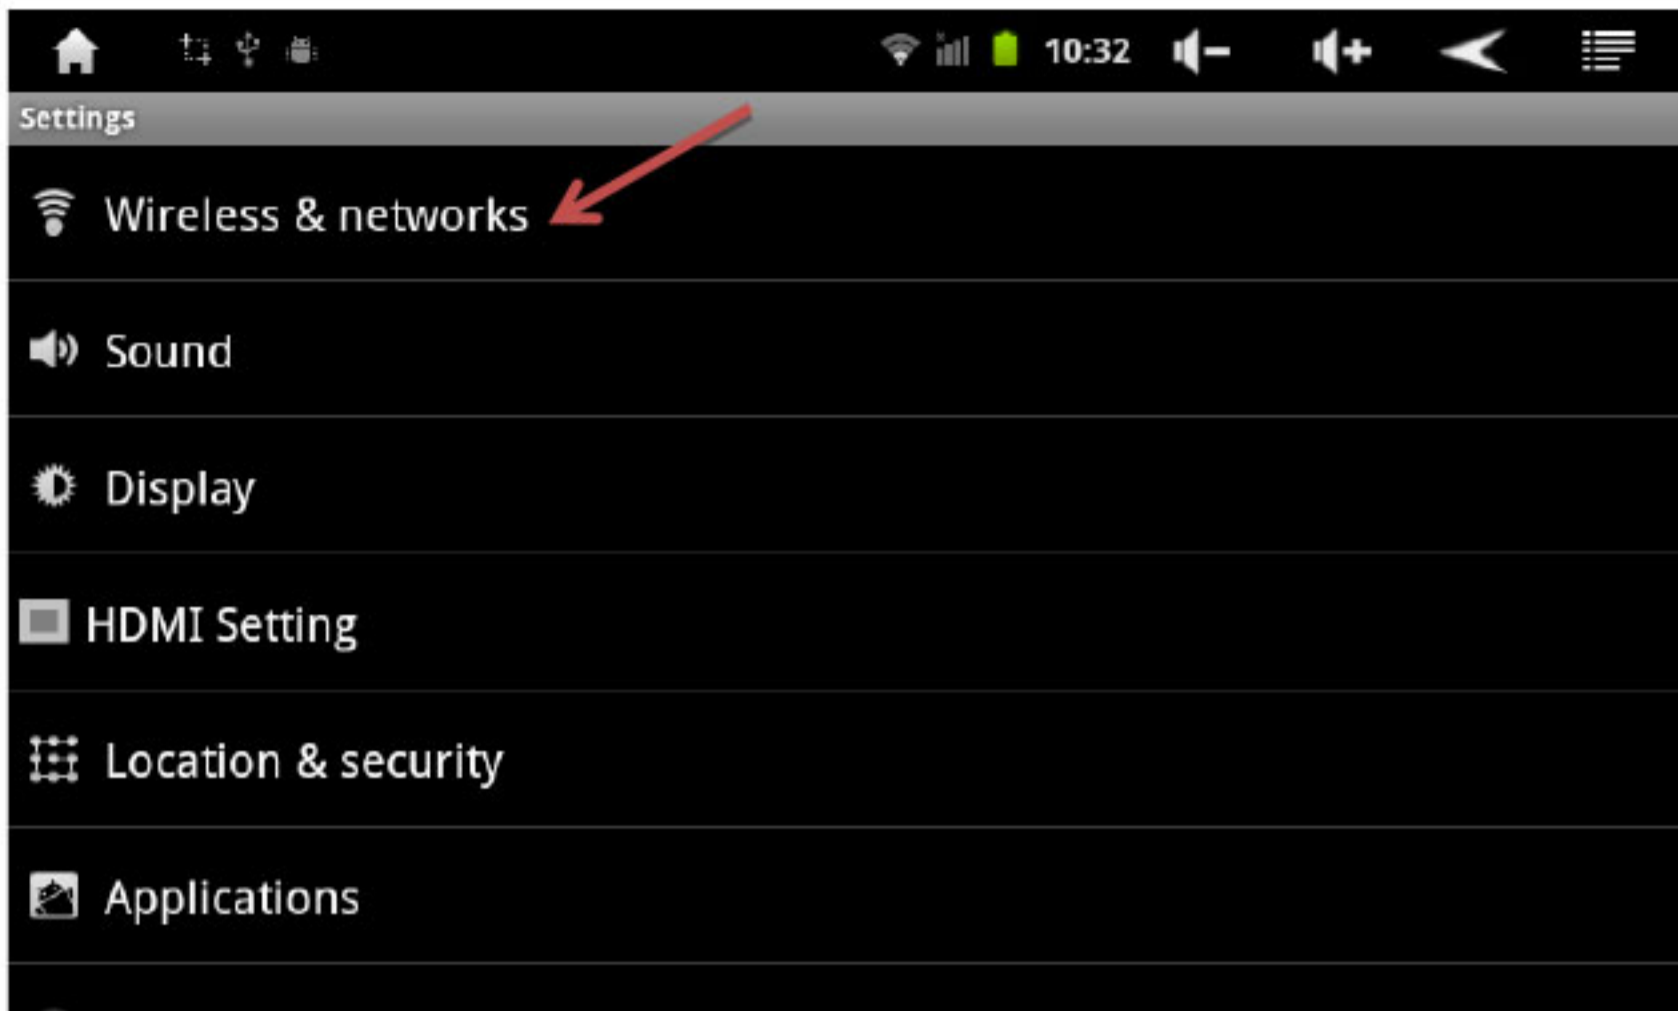


In Wireless & Networks settings put a tic mark next to **WiFi** and touch the **WiFi settings** option

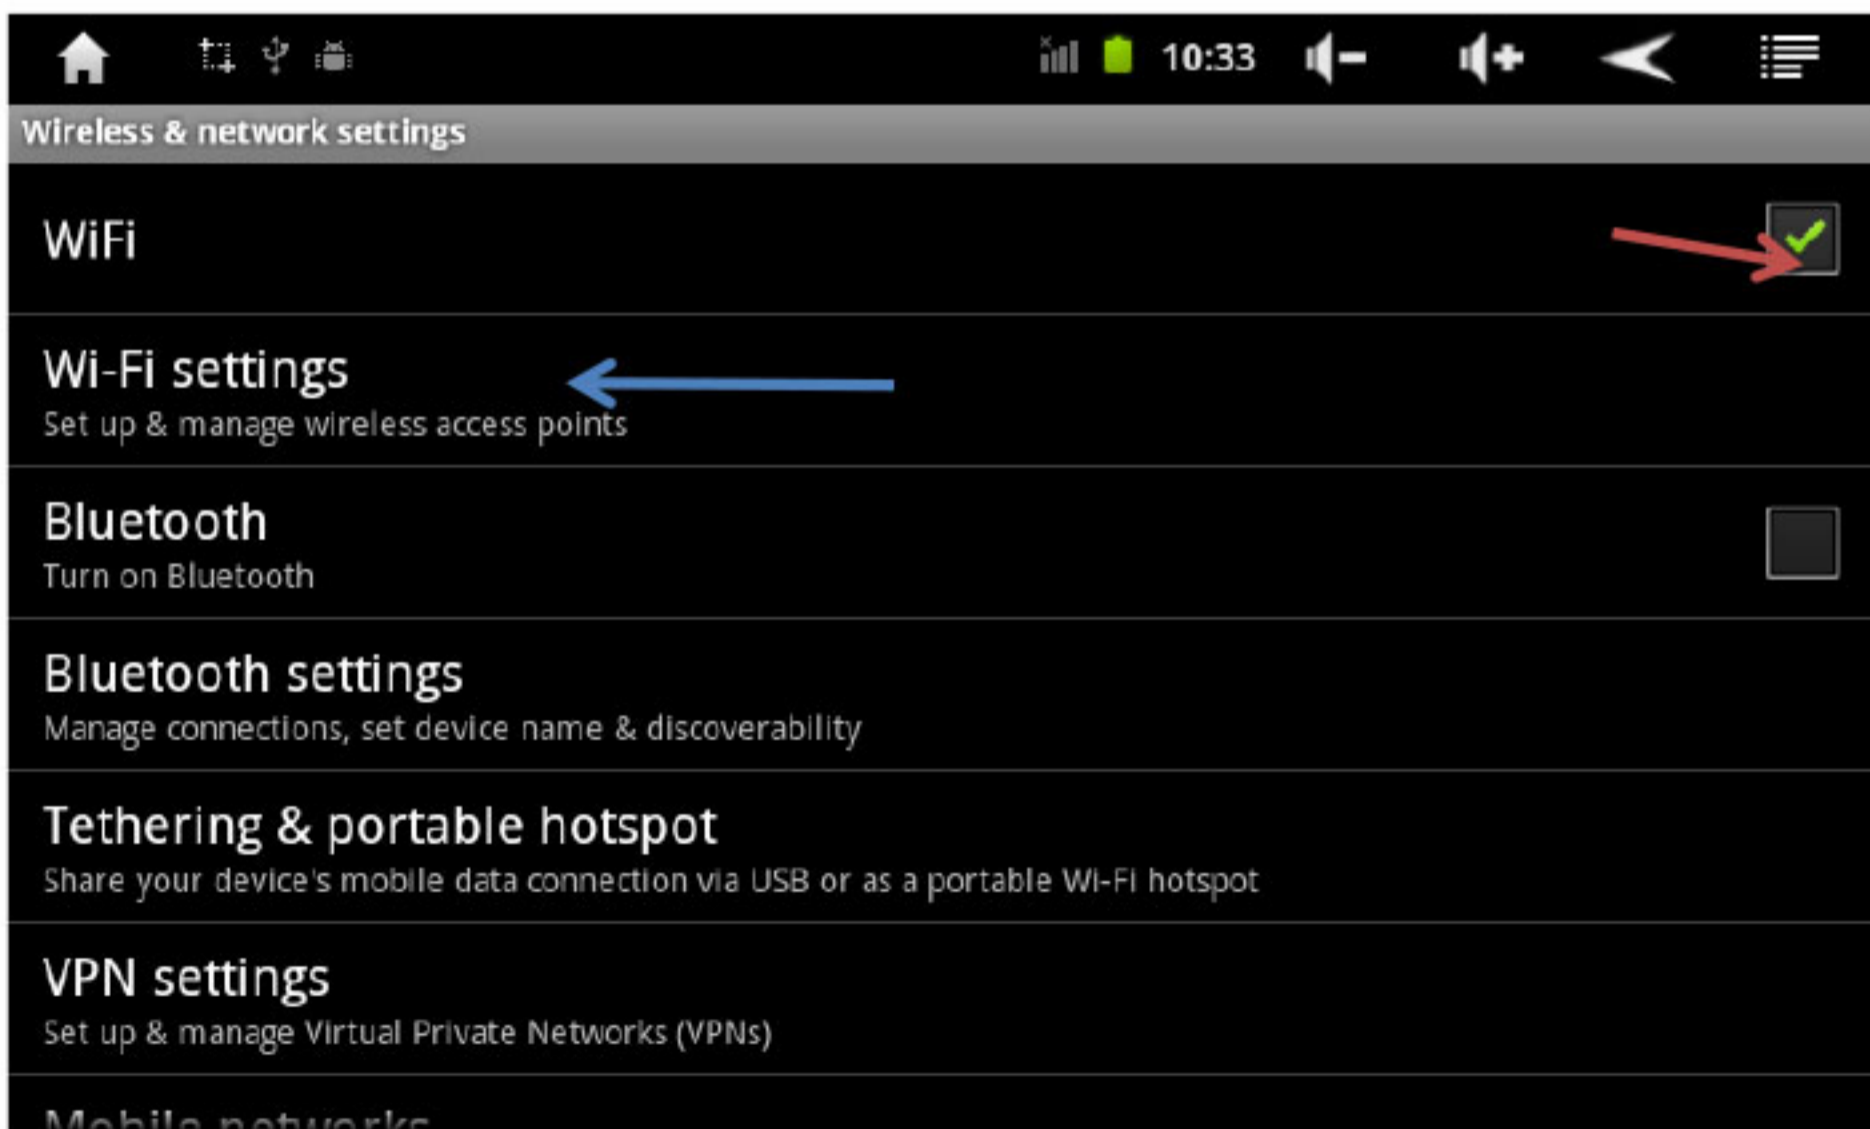


In **WiFi Settings** you will now see all the WiFi access points in range of the device touch you access point.

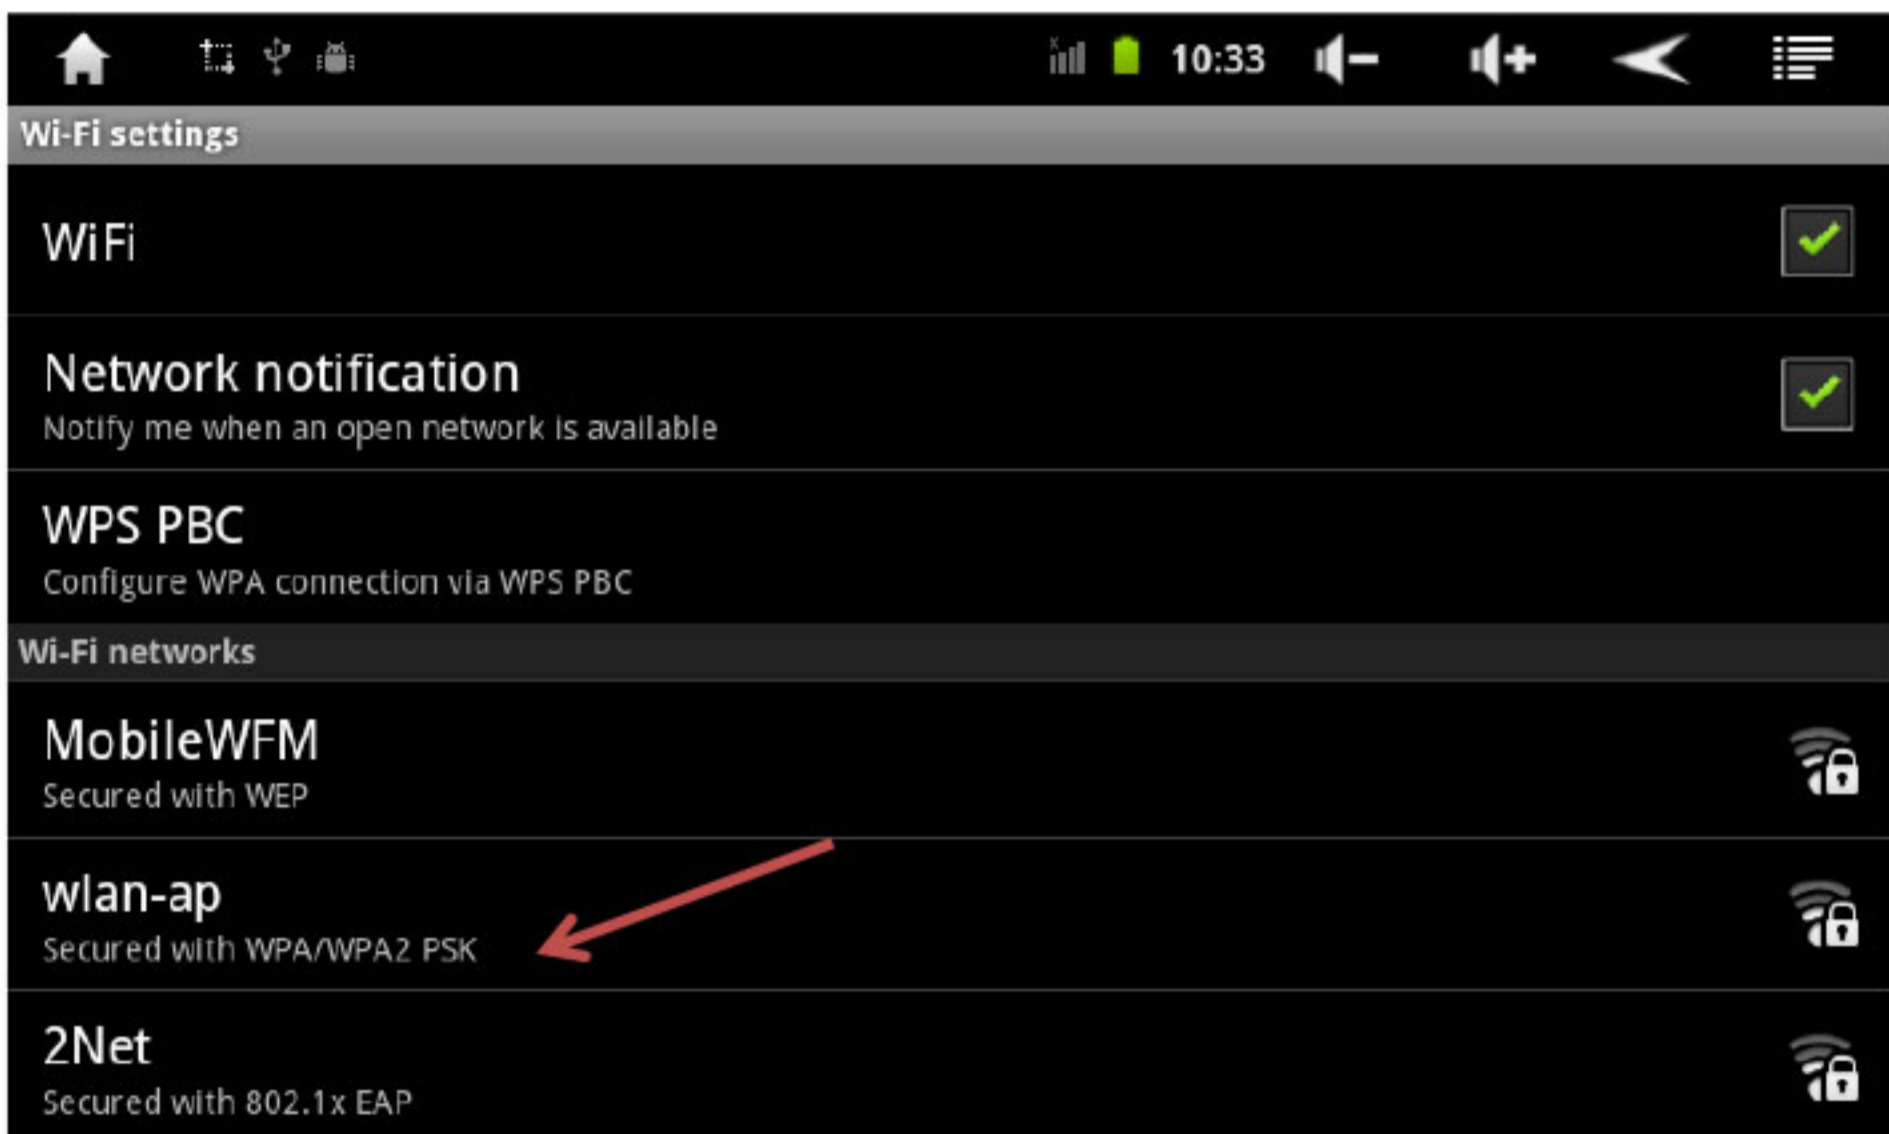

It will open the security window where you will have to enter the WEP/WPA key (the key can normally be found on the bottom of the ADSK WiFi router) to authenticate to the router

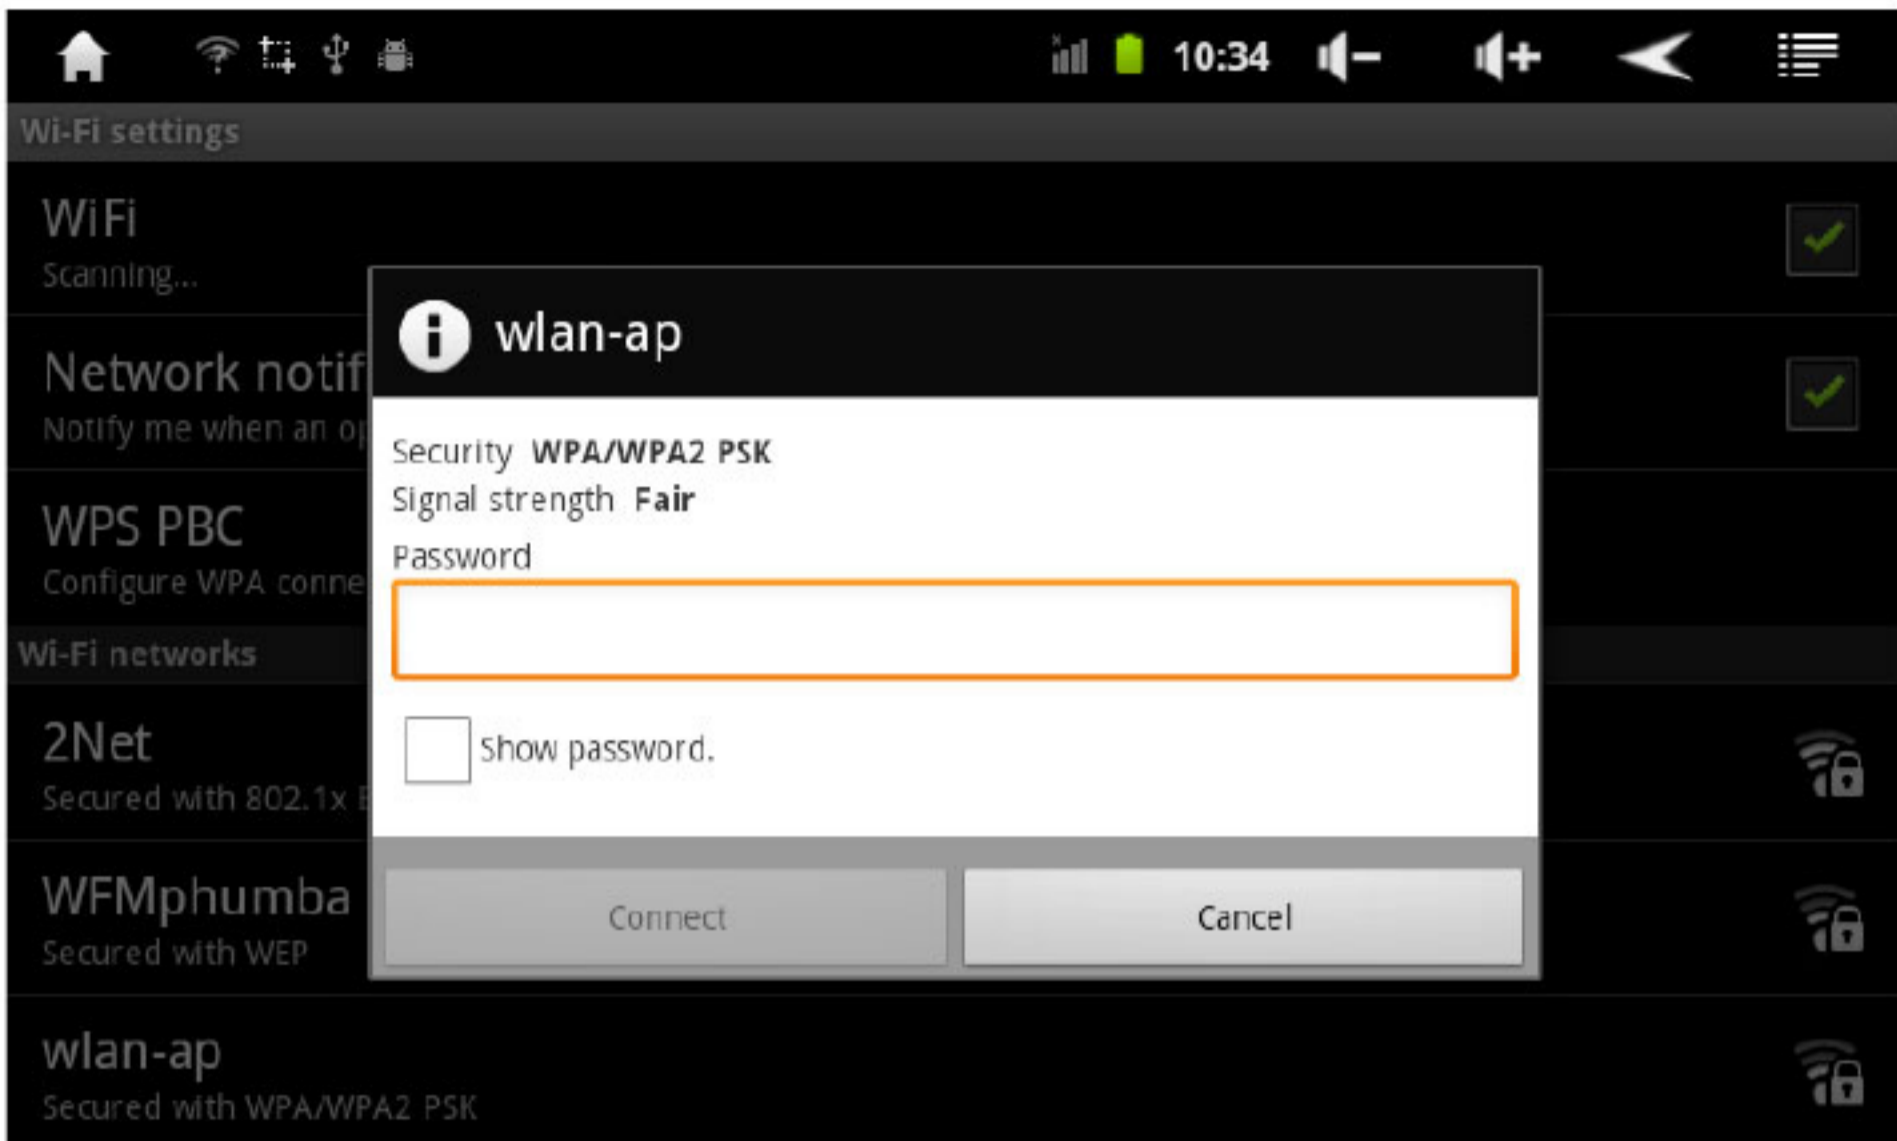

Once the WPA/WPA2PSK keys have been entered correctly the access point should change to connected

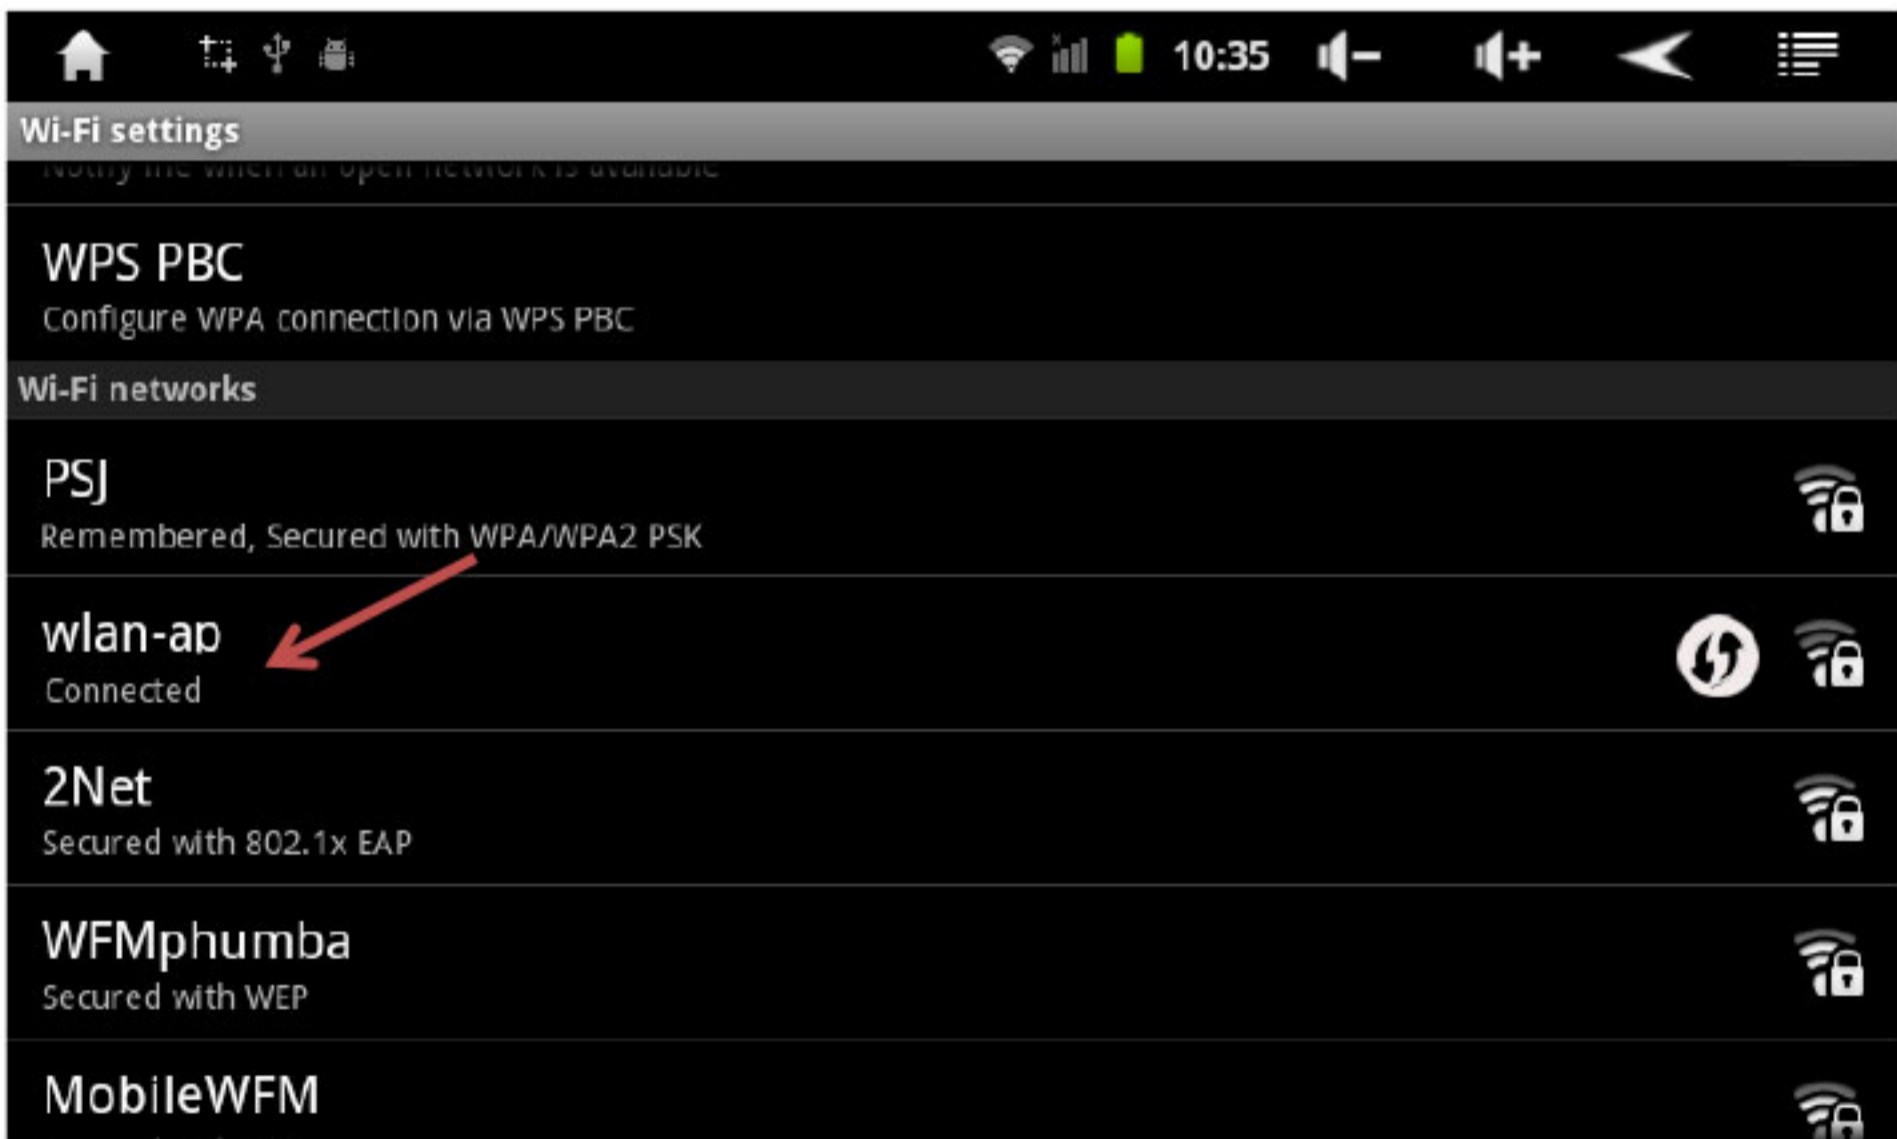

Note

Please remember that your ADSL router has to be configured to connect to the internet for you to be able to connect via The Wise Touch Tablet

To remove/unsaved a previous/old access point key simply touch and hold on the access point until the below menu appears and select **forget network**

