



**BlockCall**  
*Plus*

# Call Features Userguide



# BlockCall Plus

*Take control of your phone bill*

Telkom's BlockCall Plus is a network-based service, allowing you to block your telephone line for selected categories of outgoing calls. The service allows you to dial 20 pre-programmed telephone numbers, at any time, within the restricted categories.

1. All calls (except emergency & toll-free calls);
2. National & international calls (except emergency, toll-free & local calls);
3. International calls (except emergency, toll-free, local, national, cellular and Telkom Premium Rate services);
4. Cellular and Telkom Premium Rate services (except emergency, toll-free, local, national & international calls);
5. Telkom Premium Rate services (except emergency, toll-free, local, national, international & cellular calls); and
6. Cellular, Telkom Premium Rate services & International calls (except emergency, toll-free, local & national calls).

## **Notes:**

- Emergency and toll-free numbers exempted from barring: 10111, 107, 10177, 10131, 10132, 10133, 10134, 10135, 10136, 10137, 10210, 10212, 10217, 10219 and 0800.
- Cellular numbers barred: 072, 073, 082, 083 and 084.
- Telkom Premium Rate service barred: 08621, 08622 and 08671.
- The barring of national calls includes: 081, 082, 083, 084, 072, 073, Maxicall 0861 and Maxinet 089 numbers.




# BlockCall Plus

Take control of your phone bill


## BlockCall Plus first time Home Administration (\*35#)

Free of charge

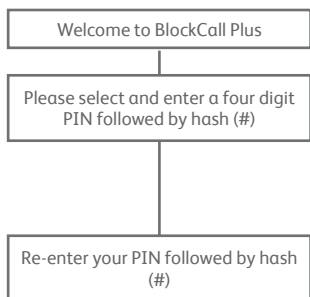

## BlockCall Plus first time Remote Administration (101551)

Normal call rates apply

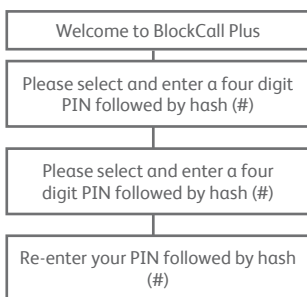

Main Menu: Your BlockCall is deactivated.  
To activate BlockCall, Press 1. To deactivate BlockCall, Press 2.  
To change barring category, Press 3. To change your allow list, Press 4.  
To change your PIN, Press 5. To exit, Press star (\*).

Activate BlockCall

Deactivate BlockCall

Change Barring Category

Change Allow List

Change PIN

To activate category 1, Press 1  
To activate category 2, Press 2  
To activate category 3, Press 3  
To activate category 4, Press 4  
To activate category 5, Press 5  
To activate category 6, Press 6

Add a number, Press 1  
Remove a number, Press 2  
Listen to numbers, Press 3  
Return to Main Menu, Press 6  
Exit, Press Star (\*)

Please enter new PIN followed by hash (#)

Please enter national dial code and telephone number followed by hash (#)

Please enter national dial code and telephone number followed by hash (#)

You have "nn" entries  
To listen to 1 to 5, Press 1  
To listen to 6 to 10, Press 2  
To listen to 11 to 15, Press 3  
To listen to 16 to 20, Press 4

Please re-enter new PIN followed by hash (#)